

<u>Part Number</u>	<u>Part Description</u>	<u>Cond</u>
30490	ACTUATOR	SV
59855	VALVE	SV
63035	APEX MOTOR PUMP	SV
118527	POPPET GUIDE	SV
179317	CLAMP V BAND	AR
324495	VALVE-AIR BLEED STARTING	AR
343544	PLATE SHOE BEARING	AR
350869	IMPELLER	AR
354404	DIFFUSER	AR
442482	EHSV, TBV	AR
518735	PUMP, HYD MOTOR TRANSFER	AR
520805	HYDRAULIC MOTOR	AR
520913	EMERGENCY GENERATOR	AR
521100	GCU-GENERATOR CONTROL UNIT,CSMG	AR
623337	PUMP	AR
623386	CYLINDER SPRING BLOCK	AR
623928	GUIDE SPRING	SV
623929	GUIDE SPRING	SV
623941	OUTER SPRING	AR
623951	INNER SPRING	AR
666041	PISTON DETECTOR	AR
666060	RVDT	SV
693861	BEARING	AR
701284	STROBE LIGHT	AR
725185	COUPLING REFUEL	AR
727540	CAP COUPLING REFUEL	AR
731378	FAN	AR
732784	ROTOR	SV
732790	STATOR	SV
734818	RING	AR
735461	IMPELLER - MATCHED W/ FAIRING	AR

736938	HOUSING ASSMEBLY - STATOR	SV
762308	RAM AIR TURBINE	SV
803763	END FITTING	SV
849018	YOKE	SV
849020	YOKE	AR
861257	CYLINDER BLOCK	SV
861264	DRIVE SHAFT	OH
861266	RETAINER	SV
861276	COUPLING SHAFT	OH
861280	SOLENOID	SV
861521	BEARING	SV
887332	PLATE	SV
887465	PISTON & SHOE	SV
892480	LIQUID TYPE FIRE EXTING. BOTTLE	AR
898052	FIRE EXTINGUSHER	AR
898870	APU BOTTLE FIRE EXTINGUISHER	AR
971841	ADAPTER BLOCK	AR
971843	WAFER PLATE	AR
974800	PUMP	AR
974802	HOUSING & INSERT ASSEMBLY	AR
974805	ADAPTER BLOCK	AR
974976	PUMP	SV
5701-1-1	AUDIO CONTROL PANEL	SV
4100947	FAN ASSY	AR
4203502	HYDRAULIC MOTOR	AR
4291011	MOTOR CONVERTER-WIPER	AR
4501238	TUBE FUEL	AR
4501243	BRACKET OIL FILTER	AR
4501422	ACCESSORY DRIVE HOUSING	AR
4501454	TUBE FUEL	AR
4501990	FORWARD SEAL PLATE	AR

4501991	BRACKET FUEL FILTER	AR
4501994	BLEED AIR ELBOW	AR
4501995	TUBE FUEL PUMP	AR
4502088	TUBE ASSEMBLY PCD	AR
4502093	AIRFOIL DIFFUSER	AR
4502380	TUBE ASSEMBLY	AR
4502405	TUBE LUBE	OH
4502411	TUBE ASSEMBLY G/B	OH
4502421	DUCT ASSEMBLY	OH
4502472	AIR INLET CONTAINMENT RING	OH
4502482	TUBE LUB, G/B TO FILTER	OH
4502574	PLATE ASSEMBLY, LIFTING/VENT	AR
4502845	TUBE ASSEMBLY FUEL SOLENOID	AR
4503158	TUBE FUEL START NOZZLE	SV
4503551	COMBUSTOR HOUSING	AR
4503900	TURBINE NOZZLE	AR
4504024	VENTURI ASSEMBLY	AR
4504050	TUBE ASSEMBLY FUEL	SV
4504160	TUBE FUEL CROSS	SV
4504401	STAR FUEL NOZZLE	AR
4504574	TURBINE WHEEL	SV
4504583	AIR INLET SCREEN	SV
4504794	LABYRINTH SEAL	AR
4505405	COMPRESSOR IMPELLER	SV
4505445	BEARING RETAINER PLATE	AR
4505587	BRACKET EXCITER	AR
4505689	FUEL CONTROL UNIT	AR
4950009	SENSOR, SPEED	AR
4950072	OIL PRESSURE SWITCH	AR
4950745	IGNITION EXCITER	AR
4950769	FUEL FILTER	AR

4950899	SURGE VALVE	AR
4951048	CHECK VALVE	AR
5913234	RAM AIR TURBINE ACTUATOR	AR
7581418	FILTER FLUID PRESSURE	AR
9260065	EMERGENCY LOCATOR TRANSMITTER	AR
40997002	CONVERTER-OZONE	AR
114083003	VALVE VENT	AR
114122009	ACTUATOR	AR
114160005	EJECTION JACK	AR
114193008	MLG RETRACT ACTUATOR	AR
201117018	UPLOCK MLG RH	AR
201122006	UPLOCK MLG DOOR	AR
201590001	ACTUATOR-RETRACTION	AR
286005656	MODI-KIT MVT200 SC4800-27-16	AR
680203037	RAM AIR TURBINE	AR
1663214301	PROBE, HEAT COMPUTER	AR
3945123506	ELEVATOR/AILERON COMPUTER	AR
3957900613	EIU - ENGINE INTERFACE UNIT	AR
3957985114	ENGINE INTERFACE UNIT	AR
3957985206	EIU-ENGINE INTERFACE UNIT	AR
4610414011	SOLENOID	AR
0006648-801	CONTROL BOX	AR
04P23-12	DUAL-THREE-WAY PNEUM. SOLENOID VALVE	AR
05814-16	BALLAST	AR
066-01143-2101	TRANSPONDER	AR
066-50000-2121	TCAS PROCESSOR	AR
066-50006-1202	ILS RECEIVER	AR
0871DL5	DETECTOR ASSY PROBE	AR
0871DP3	ICE DETECTOR	AR
1-002-0102-0317	INVERTER	AR
10065-5000-02	DENSITOMETER - FUEL	AR

1013952-5	BLEED PRESSURE REGULATING AND SHUT	AR
10166N01N00	RUDDER TRIM INDICATOR	AR
10-212701-000	PITCH TRIMMER	AR
103754-1	NUT RETAINER	AR
10-62025-3	ACTUATOR	AR
10-621630-1	IGNITION EXCITER	AR
10-631045-1	EXCITER-IGNITION UNI	OH
1071B0000-04	ACTUATOR FLAP	OH
107492-6	BLEED AIR REGULATOR	AR
109486-8	VALVE CONTROL	AR
1109V0300-3	PNEUMATIC SOLENOID VALVE	AR
1110V0700-5	VALVE, TURBINE BLADE	AR
1111A0000-01	SOLENOID VALVE	AR
1115V0700-9	VALVE, BLEED 9TH.-STG.	AR
114256004-000	RETRACTION ACTUATOR ASSY	AR
114258004-070	TRIMMER-PITCH MLG	AR
115352-1	IGNITION CABLE	AR
115352-4	IGNITION CABLE	AR
115370-1016	CONCENTRATOR, FLT CTL DATA	AR
116193-400	GEARBOX HOUSING	AR
116195-1	OIL SHEILD	AR
116196-1	OIL PUMP GEAR	AR
116197-1	INTERMEDIATE PLATE	AR
116198-1	GEAR SUPPORT SHAFT	AR
116199-0	STAR GEAR SHAFT	AR
116200-1	RING GEAR	AR
116316-1	BOLT	AR
116532-100	FITTING FUEL CONNECTION	AR
11-841193-4	EXCHANGER HEAT OIL	AR
11-851154-6	PRECOOLER EXCHANGER	AR
11-851433	EXCHANGER-PRECOOLER	SV

118529-1	PISTON	SV
1211175-233	CLEVIS	AR
1211313-105-3	HOUSING ASSY	AR
1211313-106	GLAND ASSY	AR
1211313-216	PLUG	AR
1211313-223	CLEVIS	SV
1211313-241	CONNECTOR	AR
123766-2	VALVE	AR
124-834	INDICATOR	AR
125334D-1	VALVE, PRESS FUEL	AR
1276M84G13	BELLCRANK VANE ACTUATION	AR
129448-2	THERMOSTAT	AR
129694-2	450 DEGREE THERMOSTAT	AR
1298A0000-01	VALVE-CHECK	AR
12D117-6	VALVE	SV
1320A0000-02	VALVE TRIM AIR	AR
1374-100-002	EQAR RECORDER	AR
1386B0000-02	CONTROL-SERVOCONTROL SPOILER	OH
1386C0000-01	CONTROL-SERVOCONTROL SPOILER	SV
1386D0000-01	SERVOCONTROL-SPOILER	SV
1387B0000-02	SERVO CONTROL-SPOILER	AR
1387C0000-01	CONTROL-SERVOCONTROL SPOILER	AR
141A6105-2	DOOR SNUBBER	AR
14404-010	VACUUM SYSTEM CONTROLLER	AR
14404-011-1	CONTROLLER	AR
14404-011B	CONTROLLER-VACUUM SYSTEM	SV
144-129-000-051	ACCELEROMETER-ENGINE VIBRATION NO 1 BRG	SV
144-147-000D702	VIBRATION SENSOR	AR
144-405-000-013	SENSOR VIBRATION	AR
149LF10	INDICTOR	AR
1555A9900-01	MANIFOLD-HP	SV

15800-029-4	TOILET	OH
158300-101	ACTUATOR	OH
1590M21P01	FAN BLADE	OH
160387-1	OUTPUT SHAFT	OH
161797-2	FUEL SOLENOID VALVE	OH
162300-103	COMPUTER ASSY	AR
162A1313-2	TORSION LINK ASSY	AR
162BL801	INDICATOR-FUEL TEMPERATURE	AR
164161-100	VALVE ASSEMBLY	SV
168403-1	BRACKET MOUNT FORWARD	SV
168404-200	CONTAINMENT RING	SV
168410-2	BRACKET MOUNT	AR
169564-1	CLAMP V BAND	AR
169886-2	FILTER PACKAGE	AR
1700597D	SLAT ACTUATOR TYPE C	AR
171816-100	MODULE-IDENTIFICATION	AR
172268-100A	INPUT PINION	AR
172337-100	FUEL MANIFOLD	AR
172370-100	SEAL PLATE	AR
179045-2	HOT SWITCH	AR
18022-04-01	COPILOT SEAT, FULL SHEEPSKIN	AR
181RA71R206B	RETRACTING PWR DRIVE ASSY	AR
181RA71R206C	RETRACTING PWR DRIVE ASSY	AR
18330904-2	GAUGE PRESSURE	AR
1851M42P10	CONTROL UNIT ELECTRONIC (PMUX)	AR
1-899-29	PROXIMITY SENSOR	AR
194274-4	REHEATER ASSY - HEAT EXCHANGER	AR
194402-4	BLEED AIR COOLER	AR
1960M83P05	ECU TO SOFTWARE	AR
1FA13050-5	POWER PACK	AR
1L93-506	VALVE REFUEL	AR

1U1198-6	ACTUATOR, NLG DOOR	AR
20-035008-300	MODULE	AR
20146-0102	PROBE	OH
2022432-4	ACTUATOR ASSEMBLY RAM AIR DOOR	AR
2043M17P03	VALVE ACTUATOR	AR
20700-300	VALVE APU FUEL	AR
20P78-5	TURBINE AIR SHUTOFF VALVE	AR
211C223-175	SWITCH, HYDRAULIC PRESSURE	AR
211C223-296	SWITCH	AR
211C223-527	PRESSURE SWITCH	SV
21598-01	ACTUATOR - OUTFLOW VALVE	SV
2190000-48	ACTUATOR TR	SV
2190000-50	ACTUATOR TR	SV
21SN04-209A	FUEL PRESSURE SWITCH	SV
21SN04-211A	SWITCH-OIL PRESSURE	SV
21SN04-226A	OIL PRESSURE SWITCH	SV
21SN41-52	NOSE COWL ANTI ICE PRESSURE SWITCH	SV
2240A0000-01	ACTUATOR-ROTARY	SV
2240A0000-02	ACTUATOR-ROTARY	SV
22715-000-02	ACTUATING CYLINDER NLG	SV
2300-19	MOTOR BLOWER	SV
233A2227-1	MAP LIGHT MODULE P21-1	SV
233A2229-3	PANEL ASSY-FLOOD LT	SV
233N3205-19	HYDRAULIC CONTROL PANEL	SV
238-0200-17	MOUNT, FWD ENG	SV
23E59-6	SHUTOFF VALVE	AR
256T2120-5	ACTUATOR, OUTBD LE SLAT	AR
2604880-001	FEEDBACK CABLE	AR
26453-0	LUBE PUMP ASSEMBLY	AR
26471-100	COVER	AR
26579-1	IGNITER	AR

2698A0000-01	SENSOR	AR
2704284-4	AC MOTOR	AR
273T1103-3	BARREL	SV
2740166-1	ACT ASSY	SV
2-7457-11	DOOR ACTUATOR	AR
2-7462-3	VALVE	SV
274N1051-3	VALVE, BRAKE ISOLATOR	SV
277D1520-509	VALVE-ANTI ICE	AR
2-8041-1	HYD FUSE	OH
284T0052-28	RADOME	AR
2941-2616	INNERLINE HEATER	AR
2944T100-3	PDU	AR
2955T100-9	PDU-POWER DRIVE UNIT	AR
29649-1	OIL SEPERATION PLATE	AR
2LA003965-00	LIGHT ASSY	AR
2LA005303-05	STROBE LIGHT	AR
2LA005308-01	LIGHT UNIT STROBE	AR
2LA005308-05	LIGHT UNIT STROBE	AR
2LA455393-00	LIGHT	AR
300-726	MAIN WHEEL HALF OB	AR
301-488-417-0	SHAFT	AR
301-554-406-0	BOROSCOPE PLUG	AR
30-1706-1	LIGHT READY FOR FUEL	AR
30-1883-6	LIGHT- WING & ENGINE RH	AR
301-910-007-0	VALVE	AR
3022053-204	MOUNTING FLANGE	AR
3022053-317	COUPLING SHAFT	AR
30-2715-1	FLOODLIGHT LH - TAXI CAMERA	AR
3029198-001	WAFER PLATE	AR
3029879-001	VALVE BLOCK	AR
3029880-001	VALVE BLOCK	AR

305RAA1	AUTOTHROTTLE ACTUATOR	AR
30973-242	ELECTRO VALVE	SV
30973-262	VALVE - ELECTRO	SV
31076-080	SPOILER O/B SERVO	SV
31077-100	SPOILER SERVO CONTROL	SV
31077-211	SERVO CONTROL	SV
31110-080	SERVOCONTROL-RUDDER	SV
31115-080	SERVO	SV
315A1800-6	ACTUATOR	SV
315T4212-2	CASCADE POSITION #9	AR
315T4212-4	CASCADE POS #4, #8	SV
3161357-2	HOUSING ASSEMBLY	AR
3169834-1	SHAFT	AR
3169836-2	VALVE BODY	AR
3169838-1	BODY ASSEMBLY ACTUATOR	AR
3169846-1	BELLOW HOUSING	AR
3169965-2	BODY ASSEMBLY	AR
3170242-2	SHAFT	AR
3170246-6	PLATE	AR
3170470-2	SOLENOID	AR
3170707-1	COVER ASSEMBLY	AR
3170772-9	HOUSING	AR
3174140-8	FLOW BODY HOUSING	AR
3174429-3	HOUSING ASSEMBLY	AR
3174445-1	POPPET GUIDE	AR
3176668-2	SERVO VALVE	AR
3176973-2	LVDT	AR
3176993-1	VALVE BODY	AR
3176994-2	HOUSING	AR
3177225-1	VAVLE BODY	AR
3177226-1	HOUSING ASSEMBLY	AR

3177227-1	PLATE ASSEMBLY	AR
3177230-1	SOLENOID	AR
3177237-1	SHAFT	AR
3177614-1	GEAR HOUSING	AR
3181235-1	PLATE	AR
319525-20	SOLENOID VALVE	AR
319545-32	VALVE SOLENOID	AR
319545-75	VALVE-LOAD SOLENOID	AR
319545-93	SOLENOID ASSEMBLY	AR
320-094-001-0	SPEED SENSOR	AR
320-112-001-0	ELECTRICAL ALTR LEAD	AR
320115-12	SOLENOID	AR
3202096-2	RECIRCULATION FAN CHECK VALVE	AR
320-500-403-0	HARNESS	AR
320548-2	GROUND WING TEMPERATURE SOLENOID	AR
320-549-002-0	SENSOR-N2 SPEED	SV
320-557-502-0	SPEED SENSOR N1	AR
320565-8	SOLENOID	OH
32-2684-007	OUTFLOW VALVE	OH
324195-1	VALVE	AR
3264-100	ELECTROVALVE TCC TIMER	AR
3282970-4	STOP	AR
3289628-5	VALVE, PRECOOLER FAN	SV
3290064-30	STARTER VALVE	SV
3290432-2-3	VALVE, BLEED HIGH STAGE	AR
3290888-2	VALVE AFT CARGO HEAT SHUTOFF	AR
329705-1	VALVE CLEARANCE CONTROL ROTOR ACTIVE	AR
3320550-1	CONTROL, OB SPOILER FLIGHT	SV
332700-9007	MODULE, RUDDER CONTROL	AR
3338040-1	SERVO VALVE, ELECTRO	AR
335-237-501-0	TUBE PS 12	AR

335-261-004-0	LUBRICATION UNIT	AR
335-261-203-0	TANK ASSY	AR
340856-250	PISTON	SV
340902-100	BLOCK VALVE ASSY	SV
341203-400	ROD END	AR
341861-100	EYE END	AR
341E030000	THERMOSTAT SOLENOID	AR
34600001-44	ENG FIRE BOTTLE	AR
34600028-1	FIRE EXTINGUISHER	AR
34600049-1	FIRE EXTINGUISHER	SV
34900005-34	FIRE BOTTLE	AR
35-001-9-5-01	COVER	SV
3530000-1	SWITCH	AR
3601-135-420/2000-3	FIRE LOOP	AR
3601-155-565/193C-5M	SENSOR, FIRE DETECTOR	AR
3800022-107	ACTUATOR	AR
3810056-106	MODULE THRUST REV VA	AR
381800-1005	L/E SLAT ACTUATOR	AR
382000-1001	FLAP ACTUATOR	AR
387B050000	THERMOSTAT	AR
3883220-3	IGV ACTUATOR	AR
3886167-3	ACTUATOR - INLET GUIDE VANE	AR
388D010000	THERMOSTAT	OH
38E93-5	VALVE-CONTROL,WING ANTI ICING	AR
392678-3-1	REGULATOR	AR
396430-2	VALVE. FLOW CONTROL	AR
396480-1	FLOW CONTROL VALVE	AR
396498-2	VALVE	AR
397728-6-1	VALVE AIR SHUT OFF APU	AR
398116-1-1	VALVE	AR
398310-5-1	VALVE	AR

398750-5	TEMP CONTROL VALVE	SV
398786-5	VALVE ASSY, MODULATING	AR
399571-6	SOLENOID ASSEMBLY	AR
399571-8	SOLENOID ASSEMBLY	AR
3A090-0016-01-1	SEAT ASSY FIRST OFFICER	AR
40070-01	HYDRAULIC MOTOR	AR
4039892-904	ALTIMETER, BAROMETRIC	AR
4043912-903	CONTROL DISPLAY UNIT	SV
4051600-923	FLIGHT CONTROL COMPUTER	SV
40574-2	FUEL CROSSFEED VALVE	AR
4063-16083	VALVE-ISOLATION	AR
4063-18167-1	VALVE	OH
4063-18288	VALVE-SHUTOFF,TRIM AIR	OH
4084042-911	YAW DAMPER COUPLER	OH
4100406-2	MOTOR HYDRAULIC ST TR	OH
4100941A	AIR FAN COOLING	OH
4100941B	FAN	OH
4100941C	COOLING FAN	OH
4101041-1	END BELL	SV
416N2100-717	COVER ASSY	AR
418-20044	OIL PRESSURE TRANSMITTER	AR
4188-00	INVERTER-STATIC	AR
41SG381-1	OIL TRANSMITTER	AR
44376-1	STATOR	AR
4502573A	ACCESSORY GEAR ASSEMBLY	SV
4503225-1	PLANTARY HOUSING	AR
4503363-1	STAR GEAR SHAFT	OH
4504401A	STAR FUEL NOZZLE	AR
4504694B	COMBUSTOR LINER	OH
45080-1	VALVE	AR
453-0004	ELT TRANSMITTER	AR

45731-1251-1	FUEL HEATER SERVO	AR
45731-1391	IDG OIL COOLER	AR
4663-4	CHECK VALVE	AR
47649-3	EXCITER - IGNITION	AR
4951770-1	BOLT, FUEL CONNECTION	AR
4952316-1	FUEL SOLENOID VALVE	AR
4952316-2	FUEL SOLENOID VALVE	AR
5145-1-61	AUDIO CONTROL PANEL	AR
51A045-002	CONE SEGMENT-ASSY	AR
53-0014	ACTUATOR - TWIN MOTOR	AR
5500-A1A-BF20B	PORTABLE OXYGEN UNIT	SV
5500-A1A-BF23A	PORTABLE OXYGEN UNIT	SV
5500-B1A-BF23A	PORTABLE OXYGEN UNIT	SV
558CA01Y1	CONTACTOR	SV
5669-7	AEROMATIC VALVE	AR
568-1-28300-002	FUEL PUMP	AR
568-1-28301-003	CANISTER-PUMP,FUEL	SV
568-1-29684-001	PLATE-MOUNTING ASSY TYPE 9209 MK1	AR
56H104-101	VORTEX TUBE	AR
580-268-041	CABLE ASSY	SV
5830202-106	VALVE TURBINE	AR
5908975-15	GROUND POWER CONTROL UNIT	AR
5930638-102	VALVE AIR TCC, LPT	AR
5930639-104	VALVE AIR TCC	AR
6137-5	ACTUATOR	AR
622-7878-201	TCAS TRANSPONDER	AR
6240-1	VALVE	AR
625946-10	PACK TEMPERATURE CONTROLLER	AR
62E85-1	PRESSURE SWITCH	SV
62E86-1	PRESSURE SWITCH	SV
65-44503-10	CYLINDER VALVE	SV

65-44551-9	L/E FLAP ACTUATOR	AR
65-44561-15	SPOILER ACTUATOR	AR
65-44810-5	UP LOCK ACTUATOR ASSY	AR
65-44810-6	ACTUATOR UPLOCK	AR
65-44891-7	ASSY FLIGHT CONTROL	OH
65-46141-12	UPLOCK	SV
65-52801-31	APU ACCESSORY UNIT	SV
65C26662-7	MAIN TRACK ASSY	AR
65C37053-9	RUDDER POWER CONTROL	AR
66068-08	ELECTRICAL HYD MOTOR PUMP	AR
6610-15945	ACTUATOR ROTARY	AR
6610-18520	ROTARY ACTUATOR	AR
66198-02	PUMP-HYDRAULIC	AR
6713-0630	PISTON	AR
6713-0907	BODY HOUSING	AR
6713-160	BRACKET SWITCH	AR
6713-166	DISK	AR
6714-0350	BODY ACTUATOR	AR
6714-0607	COUPLING TUBE	AR
67-2906-002	SHUT OFF VALVE	AR
67-2951-001	VALVE	AR
6730C010000	VALVE FAN	AR
6730F010000	VALVE-FAN AIR	AR
6732A010000	FAN AIR VALVE	AR
6740-0431	BODY	AR
6740-0461	BODY	AR
6740-0500	LEVER	AR
6740-86	PLUG	AR
6740-87	PLUG	AR
6740-89	SHAFT	AR
6740-98	COVER	AR

6742-41	PISTON	AR
6742A030000	VALVE-OVERPRESSURE	AR
6742D010000	VALVE-OVERPRESSURE	AR
6743A010000	VALVE-OVERPRESSURE	AR
6753-02030	LEVER ASSEMBLY	AR
6753B040000	VALVE-HP BLEED	AR
6753D010000	VALVE HIGH PRESSURE	AR
6754C030000	VALVE-BLEED	AR
6754D010000	VALVE-HP BLEED	AR
6773-02001	BODY VALVE	AR
6773-0811	BUTTERFLY ASSEMBLY	AR
6773B030000	VALVE HP REGULATOR	AR
6774-02001	BUTTERFLY VALVE	AR
6774-050	TUBE DOWNSTREAM	AR
6774G010000	VALVE, BLEED PRESSURE	AR
69202-300-3	EXCHANGER HEAT OIL FUEL	AR
7012-17971-4	VALVE-OUTFLOW	AR
7074-300	ACTUATOR-VBV	AR
7082M47G07	FLOW BLEED SENSOR	AR
71145-1	VALVE-SOLENOID	AR
71179-2	PITCH TRIMMER MANIFOLD	AR
7119M71G07	TIMER ASSY	AR
71404-1	BRAKE VALVE	SV
7147M10G04	CONTROL POWER MANAGEMENT	SV
714900-3	PUMP FUEL MAIN	AR
719224-4	ZONE TRIM AIR VALVE	SV
720737-6	RELIEF VALVE	SV
727475-6	FLOW CONTROL HOUSING	SV
727578-5	SOLENOID	AR
727649-1	HOUSING	AR
730144-1	HOUSING	AR

732591D	FAN, AIR COOLING	SV
732591E	FAN, PASS RECIRCULATION	SV
732591F	FAN-AIR COOLING	SV
734933C	MODULE ASSY-RAT GND CHECKOUT	SV
737179-1	COVER	OH
739113-4	SOLENOID	AR
740120C	GCU	SV
740200-14	PUSH ROD	OH
74-20	EXTINGUISHER FIRE HALON	AR
742868-5	ACTUATOR, RAM AIR DOOR	SV
749198-2	RESERVOIR HYDRAULIC	OH
750593-1	HOUSING	AR
750B0000-01	VALVE, TRIM AIR	OH
755300D	O/B L/E SLAT ROTARY ACTUATOR	AR
756603D	GCU	AR
756722B	VALVE ASSY, SOLENOID	AR
757742E	RAT MOTOR	AR
757A0000-10	ACM	AR
759C0000-02	CONTROLLER, PACK	AR
761B0000-01	ACTUATOR	SV
762080-1	VALVE SAFETY	SV
762A0000-04	ACTUATOR	SV
763810-4	CONTROLLER CABIN PRESSURE	SV
763A0000-02	SENSOR	SV
764A0000-03	TEMPERATURE SENSOR	AR
764B0000-01	SENSOR TEMPERATURE	AR
767460-1	VALVE, CTL SHUT-OFF	AR
767460-4	VALVE, FLOW CONTROL PACK SHUTOFF	AR
767461-2	COVER	AR
769105A	AIRBOURNE GROUND CHECK MODULE	OH
769106A	RESERVOIR, HYDRAULIC	OH

769245-1	PISTON SLEEVE	OH
769B0000-01	VALVE-CHECK	OH
773289-18	HP CONTROLLER	OH
774539-1	HOUSING	OH
774585-14	PRESSURE SWITCH	OH
774585-15	PRESSURE SWITCH	SV
775A0000-08	ZONE CONTROLLER	SV
775C0000-04	ZONE CONTROLLER	AR
775D0000-01	ZONE CONTROLLER	AR
776709-7	PROBE	AR
778666-1	SWITCH	AR
778666-2	SWITCH	OH
7800000-011	FLUSH CONTROL VALVE RH	AR
78046-03	SERVO	AR
78169-04	AUTOBRAKE CONTROL MODULE	OH
785-619-2	WINDOW HEAT COMPUTER	SV
786A0100-01	SLAT PRESSURE- OFF BRAKE	AR
786A0400-02	GEAR HOUSING	AR
786A0400-1	GEAR HOUSING	AR
786A2000-01	PRESSURE BRAKE OFF	SV
787A0000-04	VALVE BLOCK	AR
788366-3	VALVE	AR
789203-3	DISK & SHAFT SET	AR
789218-2	BRACKET	AR
789219-3	BRACKET	AR
789241-1	PISTON	AR
789245-1	CAP	AR
789789-1	CRANK	AR
789791-1	DISK & SHAFT SET	AR
790144-3	VALVE, IDGS AIR	AR
790270-3-13	HP VALVE	AR

790390-4	SENSOR	AR
790390-5	SENSOR, FAN AIR TRIM	AR
799B020000	GROUND REFRIGERATION UNIT	SV
7S611617	SWITCH MODULE ASSEMBLY	SV
800485-2-010	CONTROLLER APU	SV
802170-9	HIGH STAGE BLEED VALVE	AR
8054-51-0000	OVEN	AR
8054-61-0000	OVEN	AR
806786-1	CONNECTOR HOUSING	AR
808518-3	DISK & SHAFT	OH
808619-1	HOUSING	AR
808733-2	SERVO MOTOR	SV
808734-1	TRANSDUCER	AR
808899-1	HOUSING	AR
808900-1	VALVE-HEAT EXCHANGER	AR
809581-1	ACTUATOR	AR
809581-2	ACTUATOR MOTOR	AR
810204-4	VALVE ASSY	AR
810214-1	VALVE ZONE TRIM	AR
810221-1	VALVE, TRIM ZONE	OH
810229-6	VALVE TRIM AIR PRSOV	OH
810233-2	VALVE ASSY, AIR CHECK	OH
810287-2	HOUSING, VALVE	OH
810291-1	PISTON, ACTUATOR	AR
810294-1	PLATE, RING	AR
810301-1	ACTUATOR HOUSING	AR
810302-1	PISTON ACTUATOR	AR
810303-2	CRANK	AR
810310-1	SPRING	AR
810348-5	DISK AND SHAFT	AR
810349-103	TORQUE MOTOR	AR

810355-1	CRANK ACTUATOR	AR
810357-5	SOLENOID	AR
810357-6	SOLENOID	AR
810360-1	CRANK	SV
810367-3	DISK & SHAFT	AR
810370-1	BODY HOUSING	AR
810372-1	VALVE HOUSING	AR
810375-1	PLATE	AR
810376-2	HOUSING	AR
810378-1	GUIDE PISTON	AR
810379-3	DISK & SHAFT	SV
810601-3	WAI VALVE	SV
810618-2	HOUSING ACTUATOR	AR
810A0000-04	SERVO CONTROL	SV
810A0000-05	CONTROL, RUDDER SERVO	SV
811040-2	CONTOL VAVLE	AR
819802-1	ACTUATOR	AR
819810-1	STATOR VANE ACTUATOR	SV
819824-1	SERVO VALVE	SV
822-0299-001	ADF RECEIVER	SV
822-0330-020	HF TRANSCEIVER	OH
822-1047-030	VHF TRANSCEIVER	AR
858064-4	BODY ASSEMBLY	AR
881600-1001	VALVE	AR
884650-7	PLATE	AR
887700-1	COVER	SV
8-933-01	SENSOR PROXIMITY	SV
8ES005045-00	POWER SUPPLY UNIT	SV
8ES006502-00	POWER UNIT	SV
8TJ124GGM1	RATE OF FLOW TRANSMITTER	AR
8TJ167GHH1	TRANSMITTER-FUEL FLOW	AR

9000000-11313	TCAS -COMPUTER	AR
9023-15703-71	OUTFLOW VALVE	AR
9023-15703-81	VALVE-OUTFLOW	AR
9028A0004-01	PPU-POSITION PICK-OFF UNIT	AR
9028A0005-01	FPPU APPU	SV
9063A00005-02	SOLENOID	AR
90G237	SWITCH, PRESSURE	AR
90G97	SWITCH PRESSURE	AR
9105A0005-01	SENSOR TEMPERATURE	AR
9105A0007-01	SENSOR TEMPERATURE	AR
9106A0001-01	SENSOR, DIFFERENTIAL	AR
918A1000-01	BRAKE-PRESSURE-OFF	AR
918B0000-01	PCU-POWER CONTROL UNIT,SLAT	AR
920A0000-05	BLOCK-VALVE	OH
920A0100-01	VALVE BLOCK ASSY	AR
9238M66P08	IGNITION EXCITER	SV
926B0000-01	ACTUATOR-ROTARY	OH
926C0000-01	ACTUATOR-ROTARY	AR
953B0000-02	POWER CONTROL UNIT- PCU	OH
954C0000-01	ACTUATOR ROTARY	AR
957A0000-02	VALVE - TEMPERATURE CONTROL	AR
957B0000-01	VALVE-TEMPERATURE	OH
962-0030	HOUSING	AR
962-0073	BUSH	OH
962-0705	HOUSING	OH
962A0000-06	VALVE-TRIM AIR PRESSURE	AR
962A0000-07	VALVE-TRIM AIR PRESSURE	OH
962A0300-02	SENSOR	AR
962A0700-04	HOUSING	AR
963A0000-02	TRIM VALVE	AR
964A0000-06	VALVE FLOW CONTROL	AR

965-0976-003-206-206	ENHANCED GROUND PROX	AR
965-0976-003-218-218	ENHANCED GROUND PROX	AR
965-0976-003-232-232	ENHANCED GROUND PROX	AR
967070-17	VALVE ASSEMBLY	AR
967592-1	SPRING ASSY	OH
968A0000-03	REHEATER	OH
9700-C1A-BF20B	PORTABLE OXYGEN UNIT	AR
9700-C1A-BF23A	PORTABLE OXYGEN UNIT	AR
9700-C1A-F23AN	PORTABLE OXYGEN UNIT	AR
972A0000-03	VALVE-ANTI ICING	AR
974308-1	BODY ASSEMBLY	AR
974316-2	COVER ASSEMBLY	AR
974323-2	SHAFT ASSEMBLY	AR
974325-1	COVER	OH
974332-1	DIAPHRAM ASSMEBLY	AR
974395-3	SWITCH	AR
974440-4	BODY ASSEMBLY	AR
974470-1	SPRING	AR
974477-1	COVER	AR
974B0000-01	CHAMBER-AIR PLENUM	SV
975292-5	COVER	AR
975A0000-03	ACTUATOR-RAM AIR INLET	SV
976A0000-02	ACTUATOR RAM AIR OUT	AR
980-6022-001	SSCVR	AR
982A0000-01	VALVE-CHECK,TRIM AIR	AR
9992M86G07	PLUG BORESCOPE	AR
9992M86G08	PLUG BORESCOPE	AR
A25434006-3000	VALVE DUAL DISTRIBUT	AR
A61545-001	SERVO VALVE	AR
A64918-003	SERVO	AR
A64982-004	IGV ACTUATOR	AR

A68799	SERVO VALVE	AR
A71882-003	SERVO VALVE ASSEMBLY	SV
A80583	COVER	AR
A88004	SPOILER SERVO VALVE	AR
ACP2788AB04	PANEL, AUDIO CTL	AR
AD8552502-1	COCKPIT SEAT ACTUATOR	SV
AMU2790CB06	AUDIO MANAGEMENT PANEL	AR
AMU2790DB04	AUDIO MANAGEMENT UNIT	AR
AMU3514BA03	AUDIO MANAGEMENT	AR
AMU3514CA03	AUDIO MANAGEMENT UNIT	AR
AMU3514CS01	AMU-AUDIO MANAGEMENT UNIT	AR
AR4704-6	STRIKE ASSY	AR
AR4708-5	ELECTRIC DOOR STRIKE	AR
AR4710-1	KEYPAD	SV
AV13J5147	VALVE ASSY-MOTOR OPE	AR
B06A081CCPA	PLUG, MACHINE THREAD	AR
B27000	ACTUATOR	AR
B372BAM0511	COMPUTER, SPOILER ELEVATOR	AR
B42CA2002	VALVE	AR
B546CAM0104	FMGC FLIGHT MANAGEME	AR
B87861-3	TRANSDUCER	AR
BA21758	FIRE EXTINGUISHER	AR
BPU200MK2	FUEL PUMP ASSY	AR
C12CB0010	PUMP-FUEL,APU	AR
C16195BA	PITOT PROBE	AR
C20103500	VALVE # BRAKE SERVO VALVE	OH
C20236135	OBRM (BSCU)	AR
C20327000-001	SERVO VALVE	AR
C24703003-1	CONTROL VALVE-PARKING BRAKE ELECTRICAL	SV
C24730100-1	DOOR UPLOCK ASSY	SV
C24740001	MANIFOLD	AR

C24830000-2	UNLOCK-DOOR	OH
C24839010	BRAKE MANIFOLD	AR
C24840010	MANIFOLD	AR
CA150-02	HARNESS WIRING	AR
CA152-04	HARNESS WIRING	AR
CAR401	VALVE-CHECK	AR
CC0708I-MUA34B	RELAY-APU START MOTOR	AR
CE1909AA1	FAN	AR
CH31900-6	IGNITER PLUG	AR
CZ9284E	TRANSDUCER PRESSURE	AR
D19333-4	CONVERTER OZONE	AR
D19563-2	OZONE CONVERTER-CATALYTIC	AR
D23090000-6	ACTUATOR	AR
D23352000-2	ACTUATOR ASSY RETRACTION NLG	OH
D2557235000400	LATCH ASSY-YZ CARGO COMPT	AR
D370309	LVDT	SV
D5735007100400Z	FENCE ASSY WING TIP LH	AR
D5757030501500	STRUT INTERCONNECTING ASSY	SV
D97C00-624	ACTUATOR	AR
D97C00-654	ACTUATOR	AR
DVE90-06	VALVE, SOLENOID	OH
EVP604	VALVE SOLENOID	AR
EVT3454HC	FAN ASSY	AR
FAFC2000-11BK5	CONTROLLER, FUEL	AR
FRH010041	TWIN ACTUATOR	AR
FRH100002A	SWITCH PRESSURE	SV
FYLB52145-2	VALVE	AR
G540DA51-01	WASTE DRAIN VALVE	AR
HTE400115	VALVE-NONRETURN	AR
HTE69000-1	SWITCH PRESSURE	OH
HTE900118-001	LOW PRESSURE FUEL VALVE	AR

HTE900169	FUEL JETTISON VALVE	AR
HTE900206-001	VALVE	AR
HTE900208-001	VALVE ISOLATION	AR
J540AI1-300	TOILET ASSY	AR
J540AI1-300AMDT.A	TOILET ASSY	AR
J540AI1-500	TOILET ASSY	AR
J540AI1-600	TOILET ASSY	OH
J540AI2-300	TOILET ASSY	AR
K282AAM0305	PRINTER	AR
LJ38306	COWL, RH ENGINE	AR
LJ40836	COWL, LH ENGINE	SV
LJ40886	COWL, NOSE, ENGINE	SV
M4501987A	AIR INLET HOUSING	AR
MA20A1001-1	MOTOR OPERATED VALVE ACTUATOR	AR
MC10-08-109	MASK-OXYGEN	AR
MC10-08-114	CREW MASK OXYGEN REGULATOR	AR
MC10-19-101	CREW MASK OXYGEN REGULATOR	AR
MC10-25-101	MASK ASSY OXY	SV
MC10-25-104	OXY. MASK ASSY	SV
MC10-25-124	OXYGEN MASK	AR
MC10-32-101	CREW MASK OXYGEN REGULATOR	AR
MC10-35-123	OXYGEN MASK	AR
MC20-25-158	CREW MASK	AR
MF10-05-11	FULL FACE QUICK DONNING MASK REGULATOR	AR
MF20-003	FULL FACE QUICK DONNING MASK REGULATOR	AR
MS2191814-2	REDUCER EXTERNAL THREAD	AR
MXP401	STOWAGE BOX ASSY	AR
MXP402-3	FULL FACE OXYGEN MASK	SV
MXP801-10	BOX, OXY MASK STOWAGE	AR
MZ4306000-12	SPOILER SERVO CONTRO	AR
NAS1193K14C	WASHER, KEY	AR

P31214-A020	ACTUATOR ROTARY	AR
P78623-M280	SEAT CONTROL UNIT	AR
PS102	SWITCH	AR
QA06961ISS3	OIL SCAVAGE FILTER	AR
QEC CFM56-3C1	QEC KIT	SV
R1053M18-2	AILERON LIMIT MECHANISM	AR
R1419M14	ACTUATOR-STEERING	AR
S100-891	SPRING	SV
S210T120-124	PRE-COOLER	AR
S233T913-1	ANGLE OF ATTACK SENSOR	AR
S4-3300520	ACTUATOR	AR
S4-3300950-02	ACTUATOR-DOOR,NLG	SV
S4-3400950-06	VALVE	AR
S4-3402180	VALVE-ELECTRO MANUAL	AR
SAS912-002A	VALVE-ANTI ICE,WING	AR
SC4710	SERVOACTUATOR-YAW DAMPER	AR
SC4710-1	SERVOACTUATOR-YAW DAMPER	SV
SC4800-104	SERVOCONTROL-ELEVATOR	SV
SC4800-114	SERVOCONTROL-ELEVATOR	SV
SC4800-94	SERVOCONTROL-ELEVATOR	SV
SC5300-4	SERVO CONTROL RUDDER	AR
SPSA320-9-2-2	WINDOW	SV
SPSA340-6-1-1	WINDOW	AR
TAAI1-03CE01-02	SEAT	SV
TAAI1-03PE01-02	CAPTAIN SEAT	AR
TAAI2-33CE00-01	SEAT-FIRST OFFICER	AR
TAAI2-33CE01-01	FIRST OFFICER SEAT	AR
TAAI2-34IM20-01	THIRD OCCUPANT SEAT	AR
TC174-02	HARNESS WIRING EGT L/H	AR
TY2091A100	LATCH W/O HEAT SHEILDS	AR
V2T152D	VALVE	AR

SV
SV
SV
SV
SV
SV
SV
SV
SV
AR
AR
SV
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
AR
AR
AR

AR
AR
AR
AR
SV
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
AR
AR
AR
AR
AR
AR
AR
OH
OH
AR
AR
AR

AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
OH
AR
AR
AR
AR
AR
AR
AR
AR
OH
OH
AR
AR
OH
OH
AR

AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
AR
AR
AR
SV
AR
AR
AR
OH
AR
SV
AR
OH

AR
AR
AR
SV
AR
AR
AR
AR
AR
SV
SV
SV
SV
SV
SV
SV
SV
SV
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
SV
AR

AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
OH
AR
AR
AR
AR
AR
AR
OH
AR
AR
OH
OH
AR
AR
AR
AR
AR
SV
SV
AR
AR

AR
SV
AR
AR
SV
SV
SV
SV
SV
SV
SV
SV
SV
OH
AR
SV
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
AR
SV
AR
SV
AR
AR
OH

AR
AR
SV
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
SV
SV
SV
SV
SV
SV
SV
AR
SV
SV
SV
AR
AR
AR

SV
AR
AR
SV
SV
AR
SV
AR
AR
AR
AR
AR
AR
AR
AR
AR
SV
SV
AR
SV